

[Français](#)[Deutsch](#)[Italiano](#)[Español](#)

ADVANTAGE MAINTENANCE

The Advantage injector has been designed and built to inject liquid solutions with a minimum of maintenance. However, solutions being injected by the unit may not be fully dissolved or the water supply may be contaminated, leaving deposits, residue and precipitates in the injector that require attention to provide maximum dependable service. The degree to which this occurs will vary depending upon the solutions used and the cleanliness of the water supply.

By performing the following maintenance procedures, your injector will be ready to serve your needs reliably and accurately.

What preventative maintenance do you suggest?

Clean inlet filter: Clean or replace water filter as required to reduce pressure loss and optimize the life of the injector. Always provide the injector with clean filtered water.

Keep solution and solution filter clean:

- Keep the solution container covered to prevent dirt, flies, feathers, leaves or other air- born debris from entering container.
- Rinse container thoroughly and often.
- Mix solution daily or more often, if necessary.
- Use FILTERED WATER when filling the container.
- Clean your solution filter regularly with warm, soapy water.

Dosmatic recommends that you change the o-rings and dosage piston (wear parts) at least once a year, preferably every six months, depending upon usage.